
PRIME

NEW CONSTRUCTION DRIVER & EM MAINTENANCE


EM REPLACEMENT

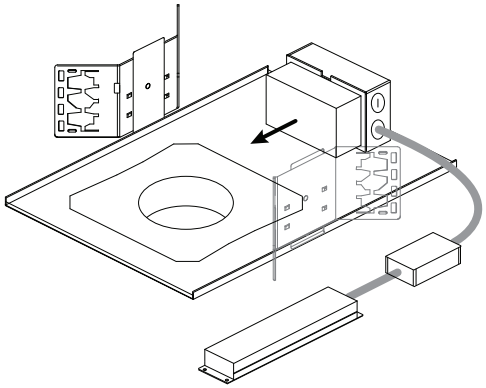

STEP 1

DISCONNECT DRIVER BOX


Disconnect the driver box from the J-box

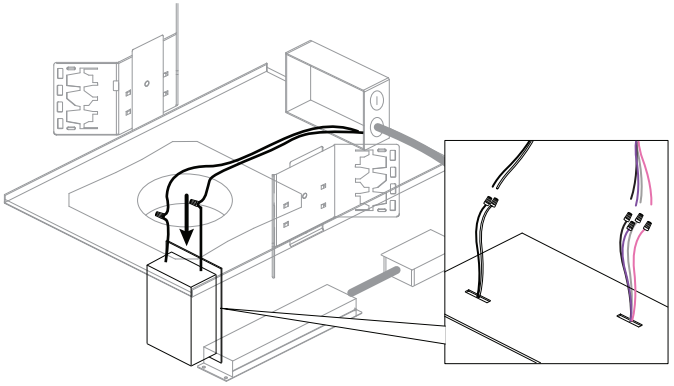

STEP 2

PULL THE DRIVER BOX

Pull the driver box through the cutout and disconnect the wiring

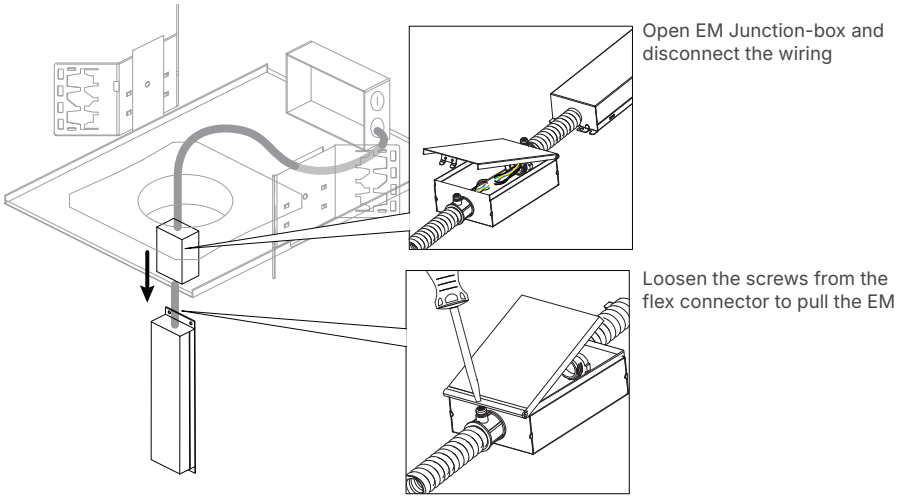

Open EM Junction-box and disconnect the wiring

Loosen the screws from the flex connector to pull the EM

STEP 3

PULL THE EMERGENCY BATTERY

Pull the EM through the cutout and open EM J-box, disconnect the wiring, then loosen the screws from the flex connector in order to pull and replace the EM

